

SWIPPER™

TESTING KITS
FOR DRUGS

Cannabis (Marijuana/Hashish) Test Kits SW-3300




**Read
Before
Use**

As a precaution, gloves and eye protection should be worn when handling substances and using test units. Do not puncture any part of unit. Do not remove probe after breaking the ampule. In event of a spill, rinse affected area thoroughly with water. Keep out of reach of children. Store the tubes in a dark place, not exposed to light. All results are presumptive. If necessary, further testing by a competent drug testing lab can provide additional identification.

Test Preparation

1

Remove the SWIPPER™ Cap from the test unit.



Ensure that the test tube remains upright in order to avoid the ampule falling out of the tube.

2


Sample the suspected substance with the SWIPPER™ Cap.



Test Preparation

3

Return the SWIPPER™ Cap to the test tube. Press firmly.

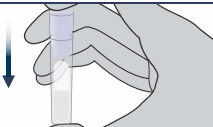

STOP

Do not continue unless the SWIPPER™ Cap is properly secured.

Identification


4

With **thumb and forefinger**, squeeze the test tube until the ampule breaks.



5

Gently shake test up and down to ensure that the liquid touches the Cap.



Results



The appearance of a red color within a few seconds indicates the presence of Cannabis (Marijuana/Hashish).



If no red color appears within a few seconds, Cannabis (Marijuana/Hashish) is not present.



* **Also Note:** The appearance of a yellow color that darkens to a reddish color after 1 minute, does not indicate the presence of Marijuana or Hashish.



Disposal

The test kit is safe to dispose of in the trash.

ENG
v1.0
01-22



IDenta
World Leader in
Forensic Products

Manufactured by IDenta Ltd
www.identa-corp.com
Patented Technology • Made in Israel

LOT:

EXP: